

Update Guide ROCAM Mini-HD Monitor

Prerequisites:

- Computer with SD card reader
- Mini-HD Monitor with SD card
- Mini-HD battery
- Update file ROCAM MINI - [Software Updates | ROTHENBERGER](#)

Perform update

- Remove the monitor from the packaging.
- Open the cover to access the SD card.



- Remove the SD card.
- Download the latest update file via computer from the Mini-HD product page under "Documents" and save it on the SD card.

e.g. "Rocam_Mini_Release_05.20.25.tar"

- Reinsert SD card with update file.




- Insert the battery into the monitor.



- Check that both the battery and the SD card with the update file are inserted correctly.
- Switch the monitor on using the button at the top.



- Wait until the monitor has fully booted up.
- A pop-up window should automatically appear asking if you want to perform an update.
- Click on **"Update"**.

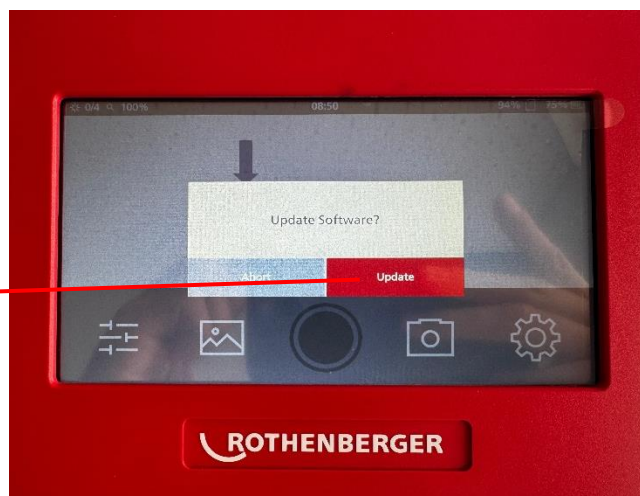

- The monitor will now download the update from the SD card and install it.
- **Important:** The monitor switches itself off and on again.
- The screen will remain black for about **45 seconds** while the update is being carried out.
- **DO NOT SWITCH OFF THE MONITOR MANUALLY DURING THIS TIME. THIS CAN LEAD TO A DEFECT.**

- After the successful update, you can find the new version number under Settings – Device Information
- The update file deletes itself from the SD card.
- The update process is now complete.

