



LEDLENSER HF8R


HF8R Core

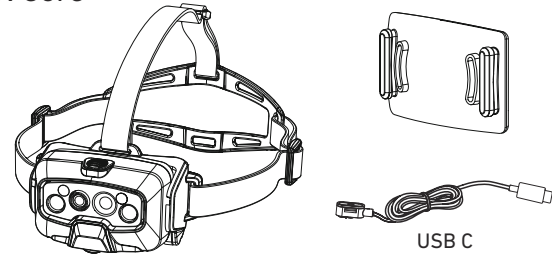


HF8R Work

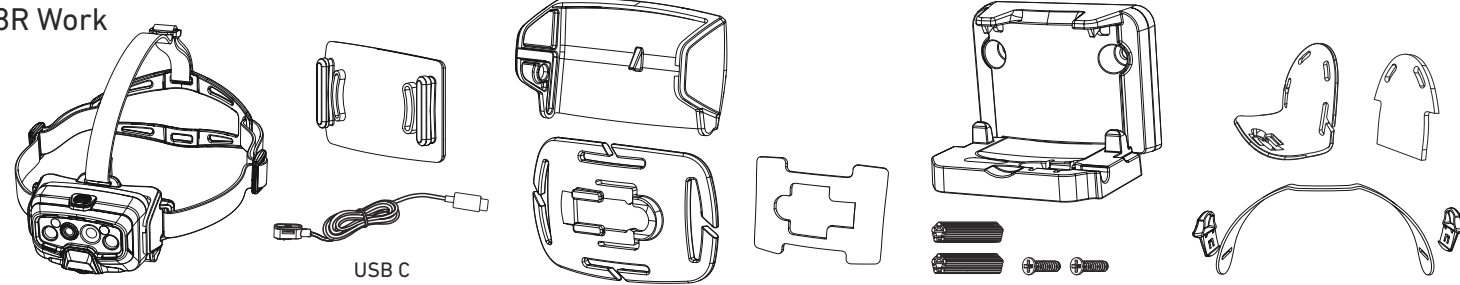


HF8R Signature

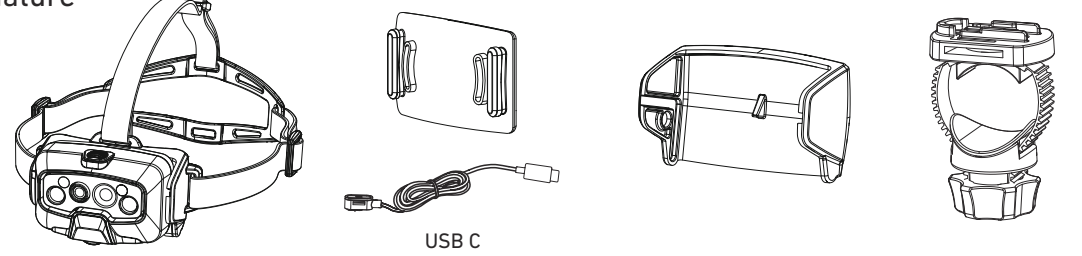


Magnetic Charge System

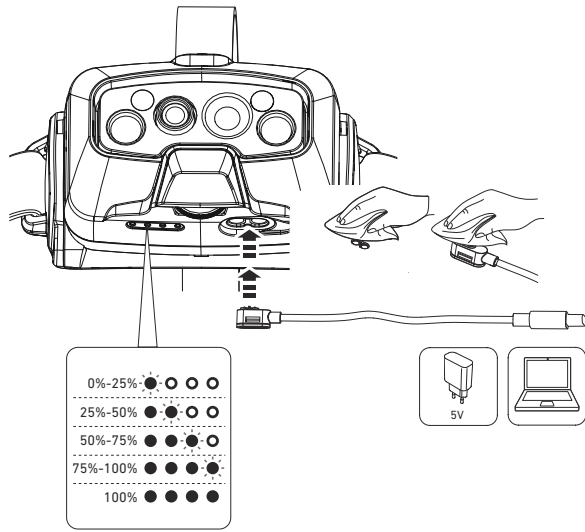


Transportation Lock

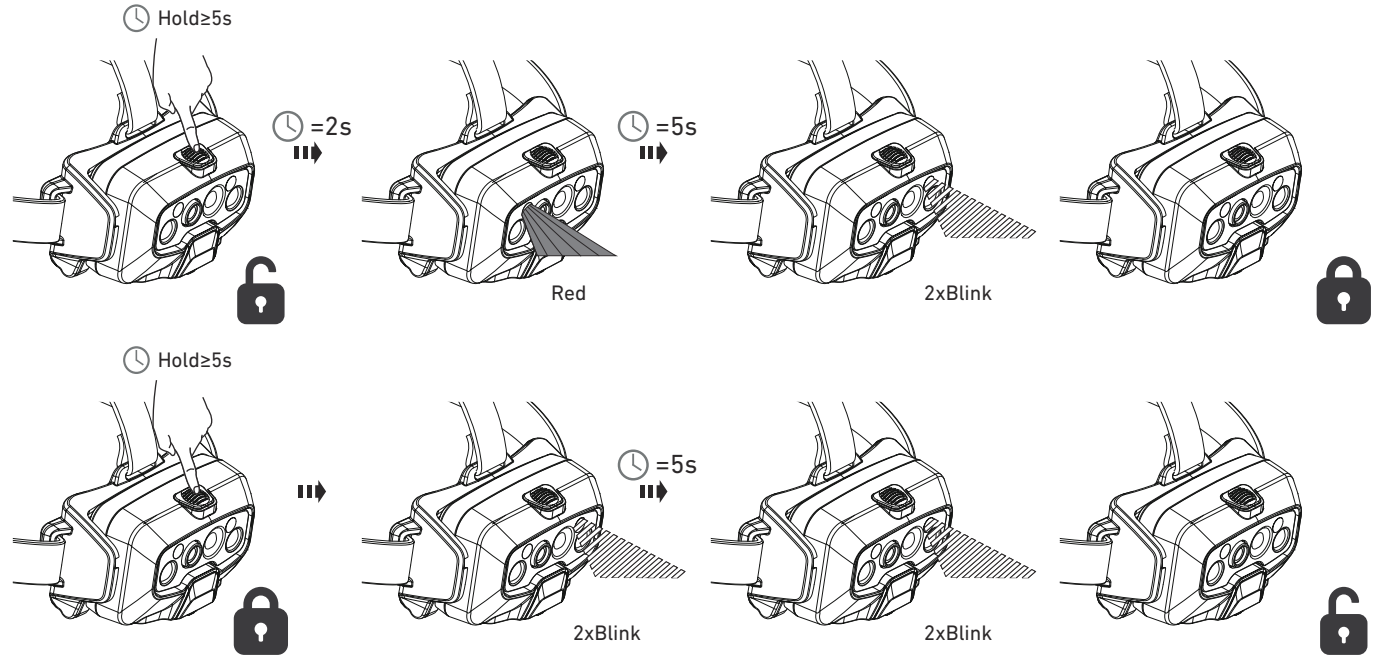


Boost

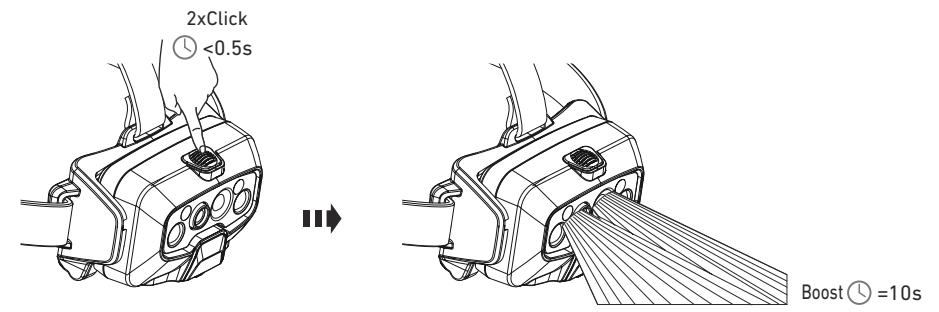


Boost Overheat Warning

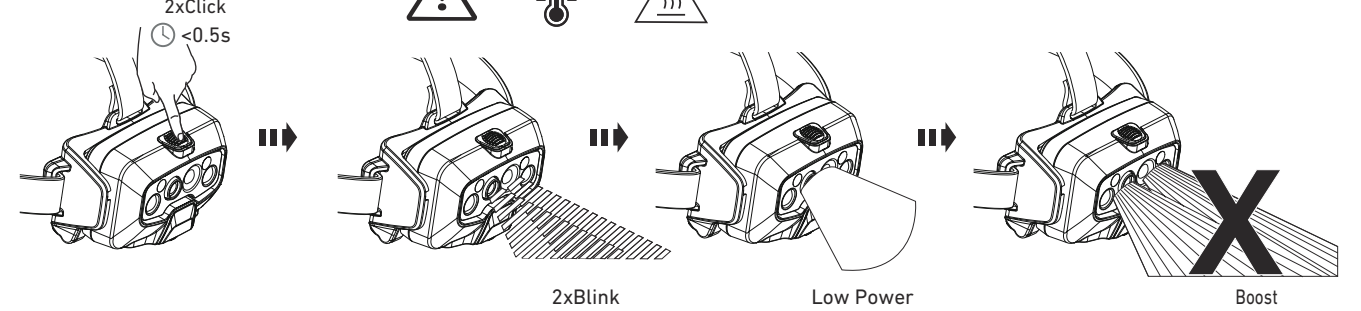


Battery Indicator

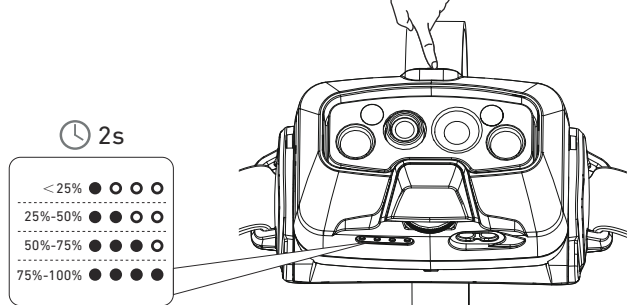


Connecting System Adapter (HF8R Work/HF8R Signature)

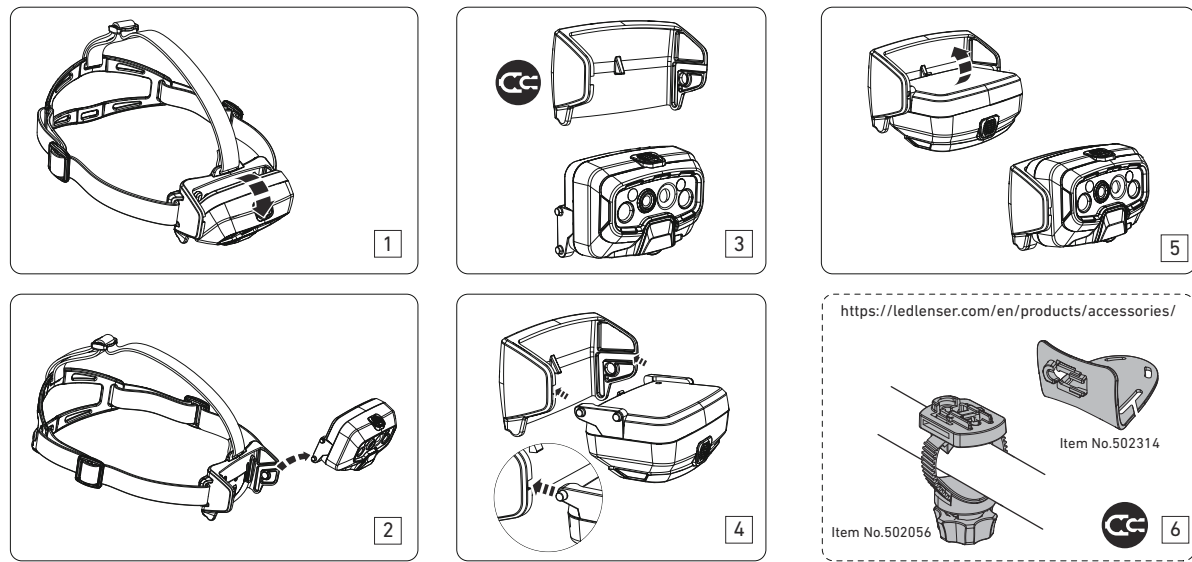


Low Battery Warning

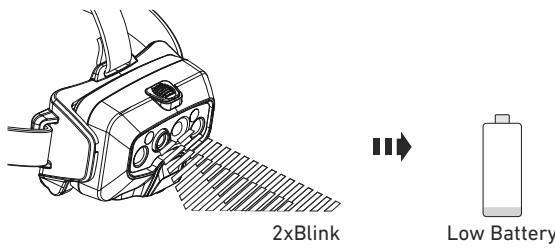


Digital Advanced Focus System

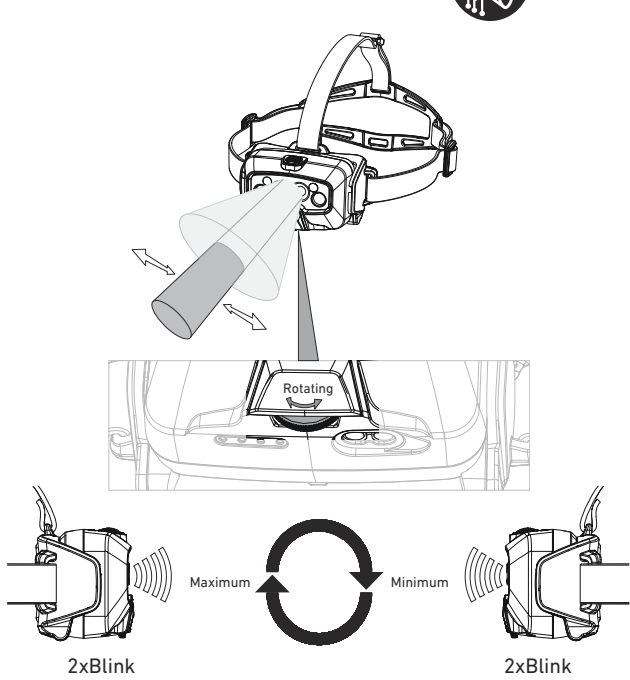


Lamp Head Rotation

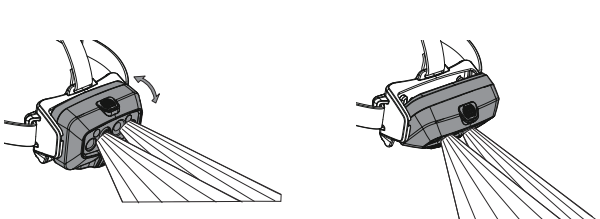


Helmet Adapter(HF8R Work)

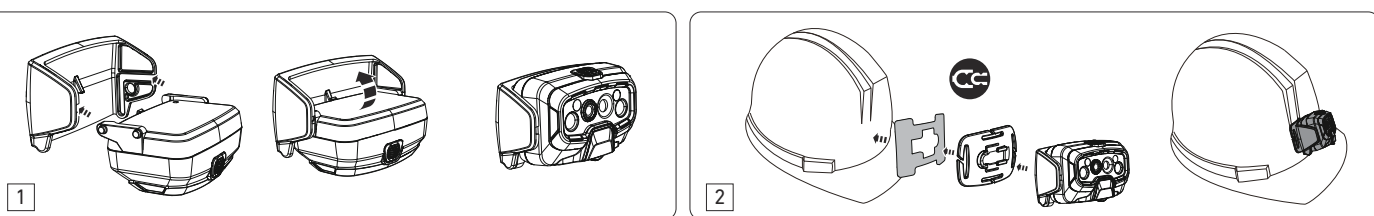


Helmet Connecting System (HF8R Work)

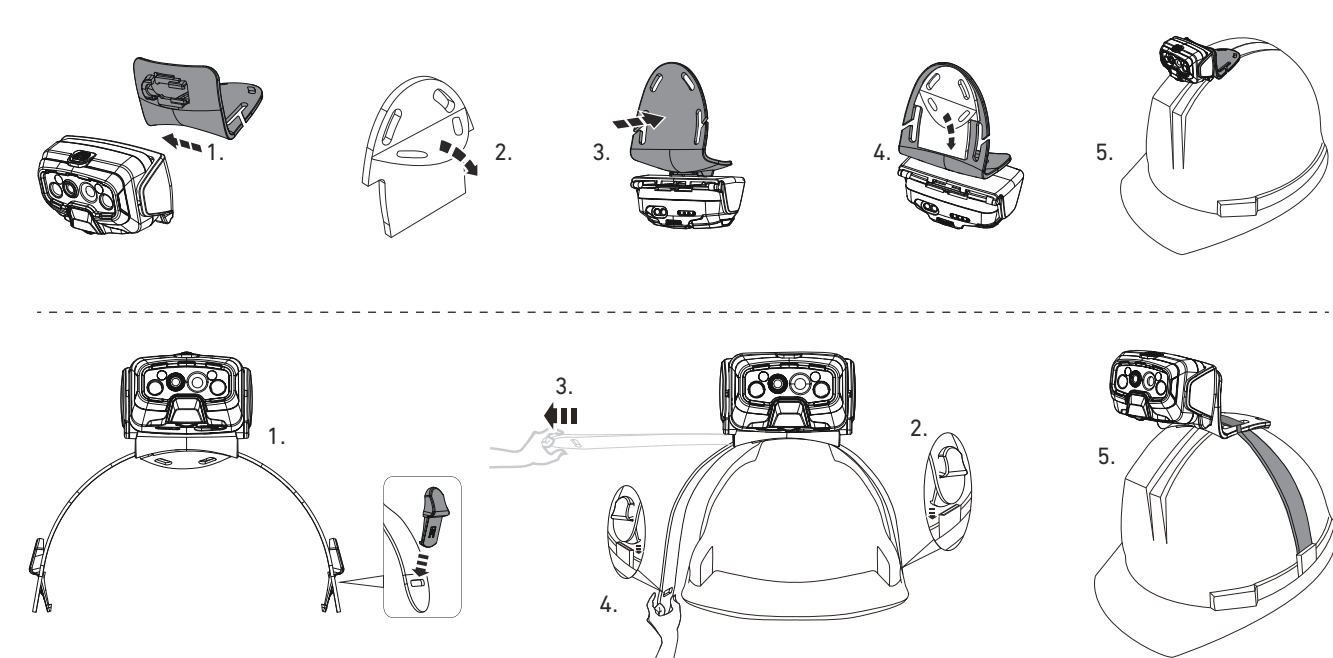


Comfort Pad

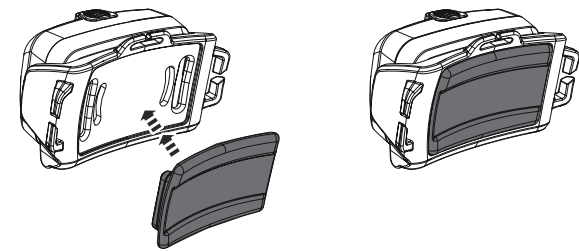



Wall Holder (HF8R Work)

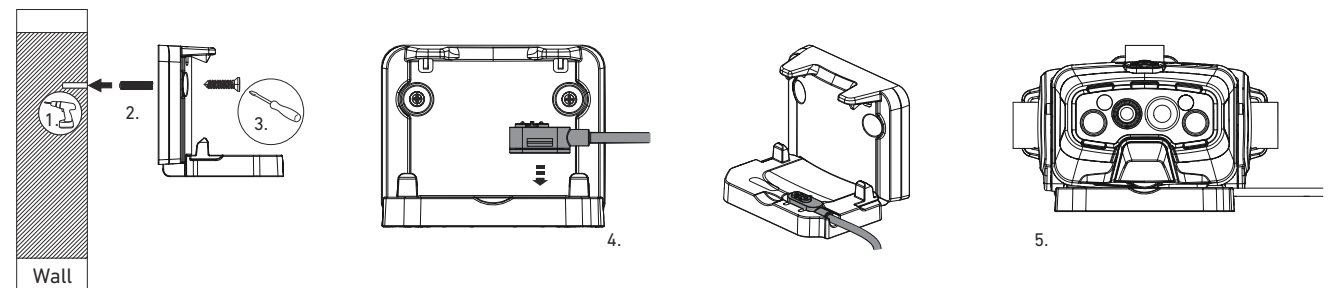


Universal Mounting Bracket (HF8R Signature)

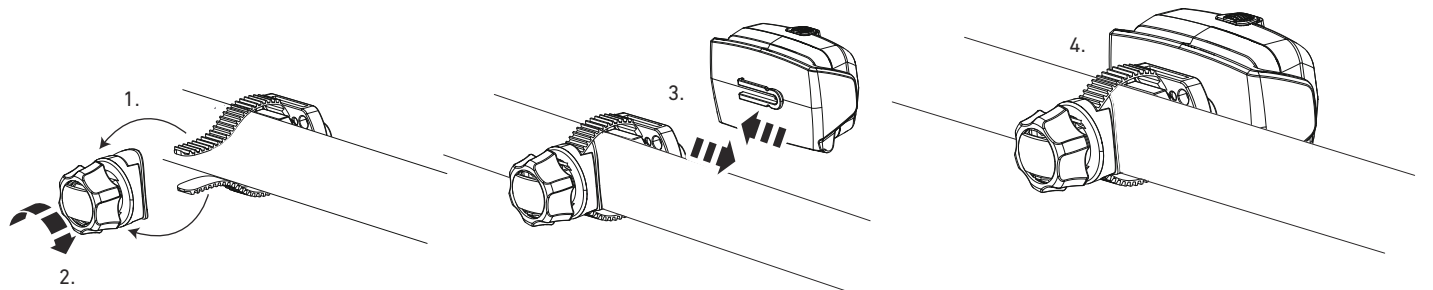

Overheadhand

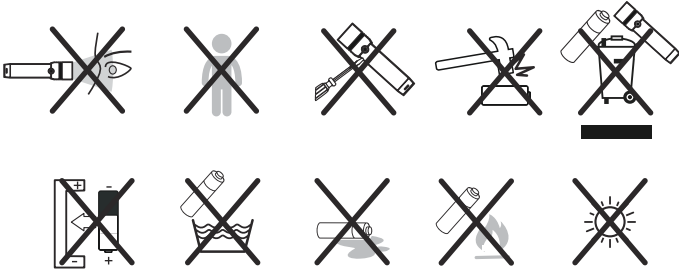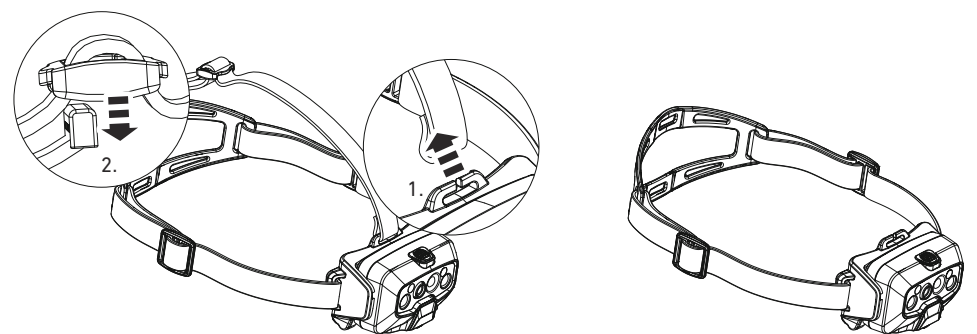


HF8R Core/HF8R Work

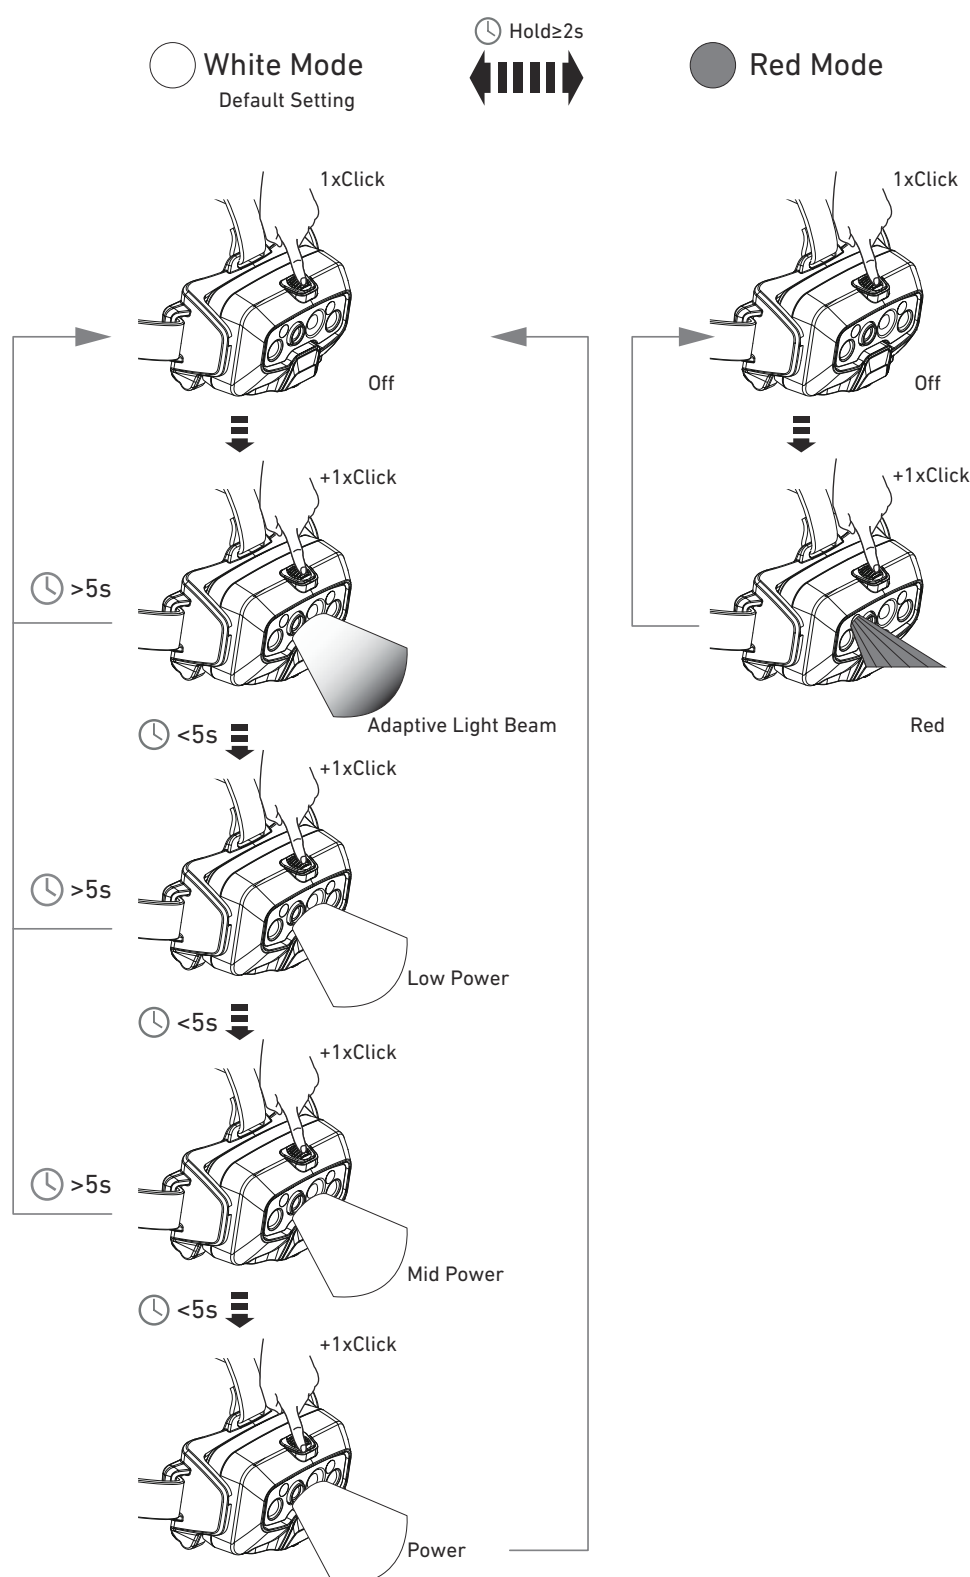


Adaptive Light Beam




Direct to Red Mode (HF8R Core/HF8R Work)

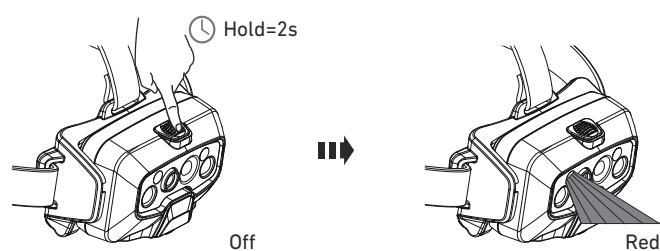


Direct to RGB Mode (HF6R Signature)

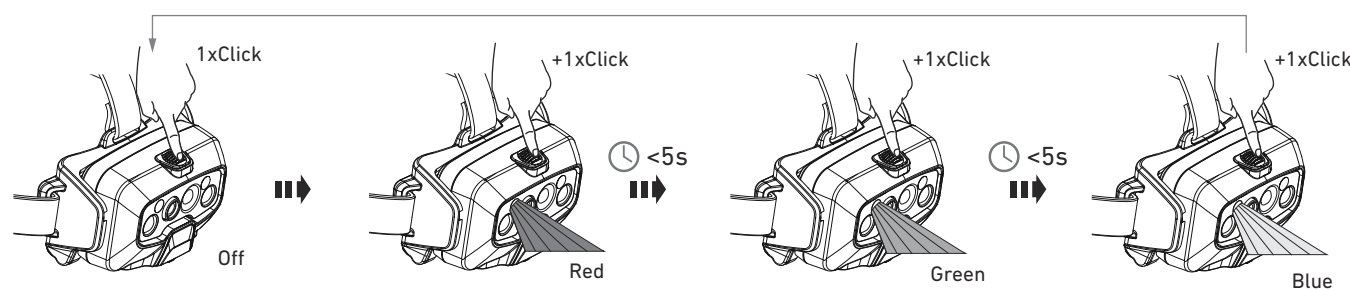

HF8R Signature

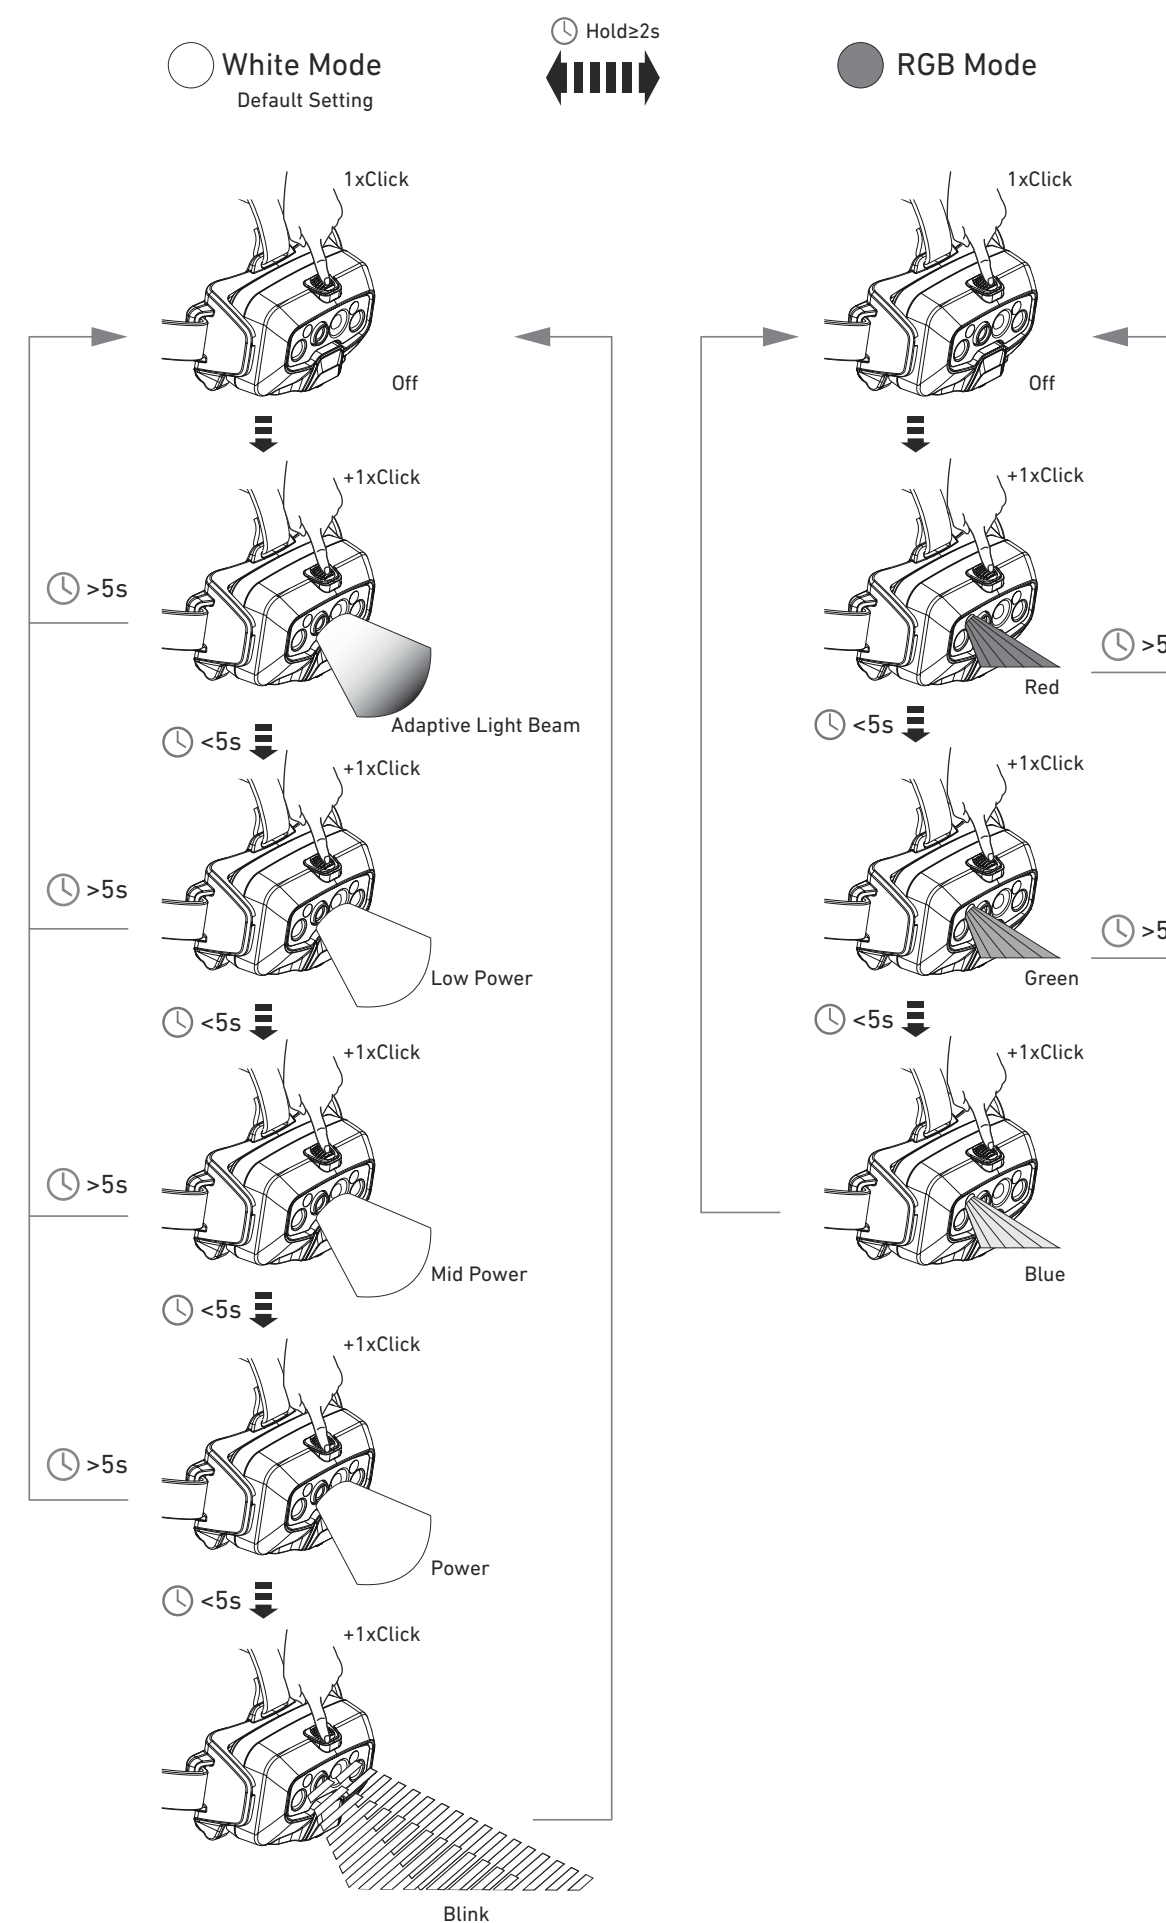

Reset to default setting

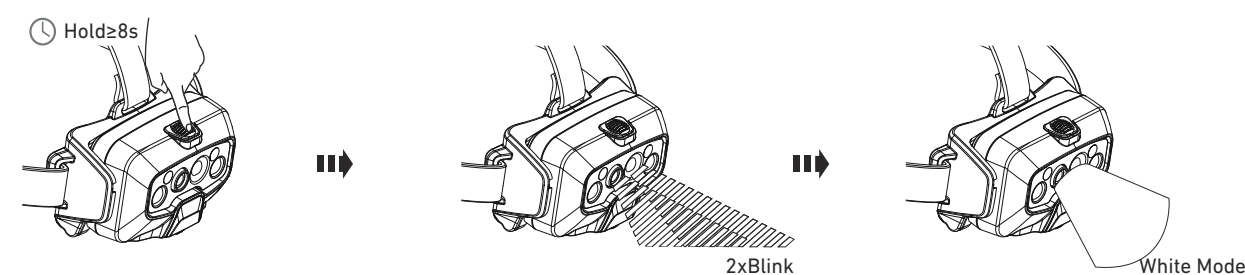

APP Mode

