
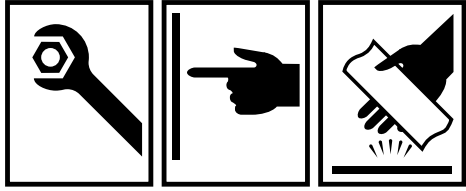
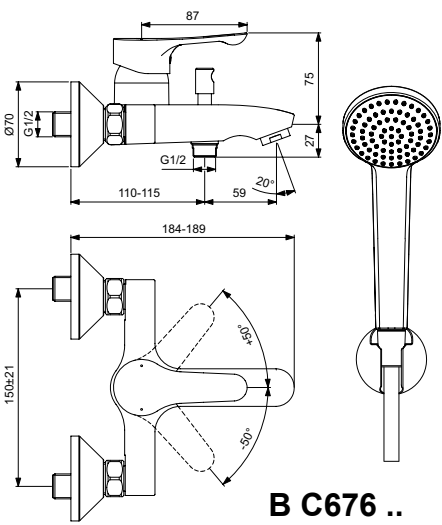
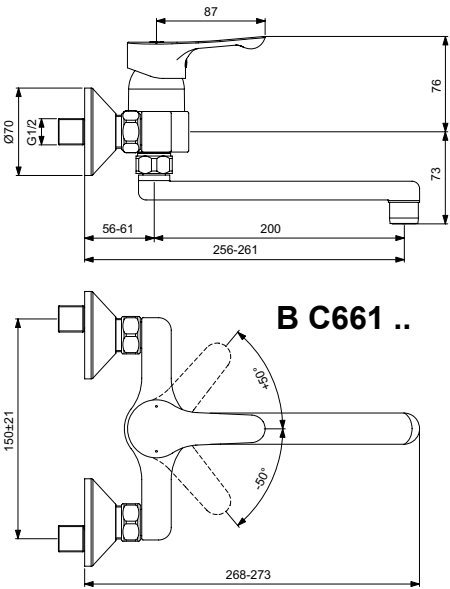


Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Pieśe de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD, .....

|                   |                   |
|-------------------|-------------------|
| 1 - B 961564 XX   | 26 - B 961346 NU  |
| 3 - B 964696 NU   | 27 - B 960604 XX  |
| 4 - B 961229 XX   | 29 - B 9467 XX    |
| 5 - B 961230 NU   | 30 - B 960976 XX  |
| 7 - B 961478 NU   | 31 - B 9421 XX    |
| 7a - B 961480 NU  | 32 - A 961640 NU  |
| B961477NU-BC649.. | 33 - B 960018 XX  |
| 9 - B 960645 NU   | 33a - B 960286 XX |
| 10 - B 960646 XX  | 34 - B 960024 NU  |
| 11 - A 960537 XX  | 34b - A 962728 NU |
| 12 - B 961283 XX  | 35b - B 964585 XX |
| 14 - B 960583 NU  | 36 - B 960883 XX  |
| 16 - B 961326 NU  | 36b - B 960828 XX |
| 17 - B 961389 XX  | 37 - B 960486 XX  |
| 18 - B 961233 NU  | 38 - B 960167 XX  |
| 21 - A 963489 XX  | 39 - A 960944 NU  |





|  |       |  |         |  |    |  |  |           |
|--|-------|--|---------|--|----|--|--|-----------|
|  | P bar |  | MAX. 10 |  | 5  |  |  | Q (3 bar) |
|  | T °C  |  | MAX. 80 |  | 65 |  |  | l/min     |
|  |       |  |         |  | 40 |  |  | 20        |
|  |       |  |         |  |    |  |  | 13        |
|  |       |  |         |  |    |  |  | BC649..   |
|  |       |  |         |  |    |  |  | 3,8       |

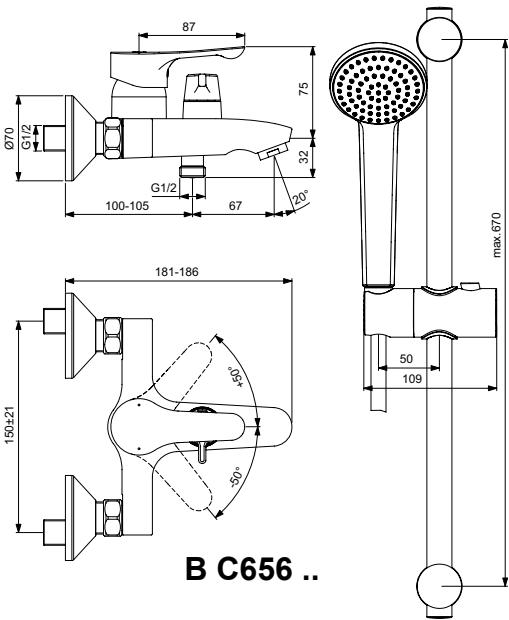

ALPHA

Ideal Standard

03.2025 / B665906

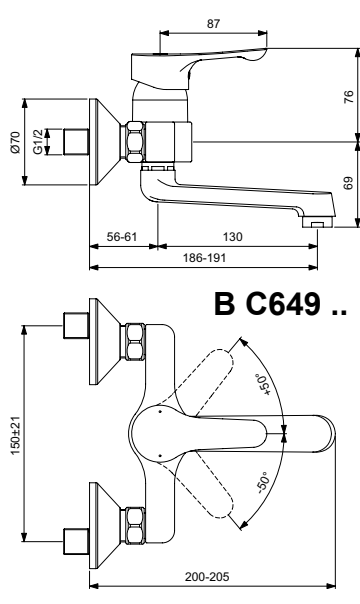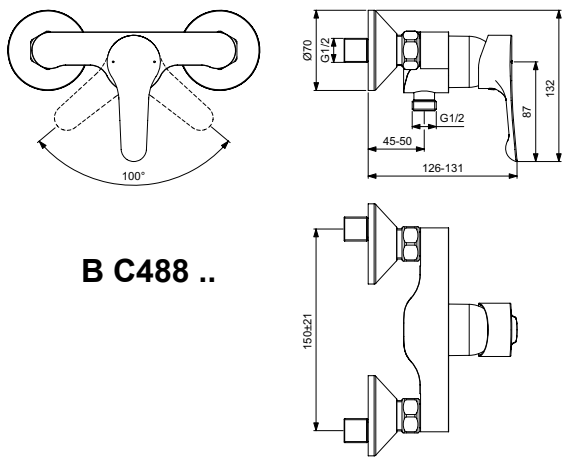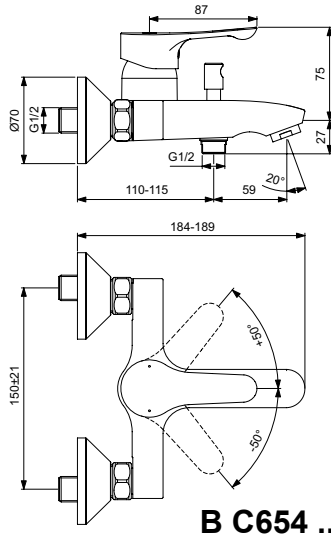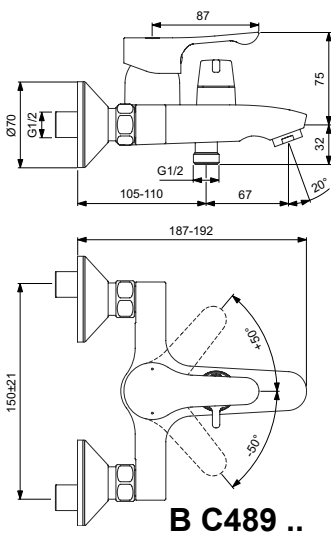

Ideal Standard International NV  
Corporate Village – Gent Building  
Da Vincilaan 2  
1935 Zaventem  
Belgium  
www.idealstandard.com

