

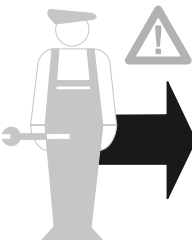
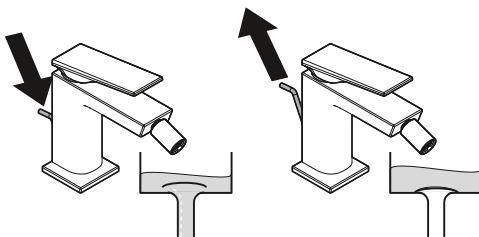
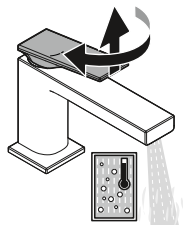
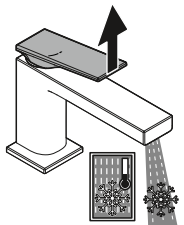
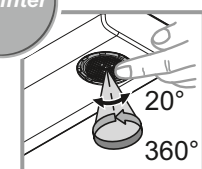
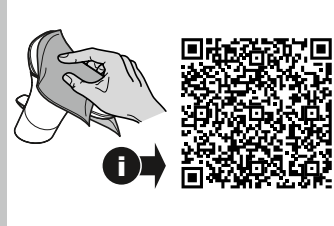
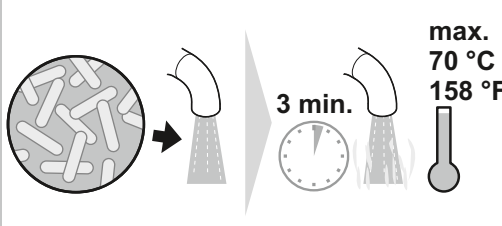
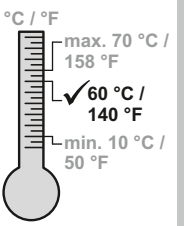
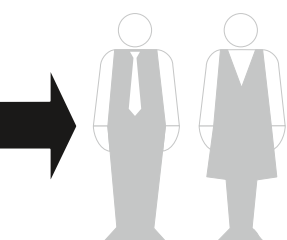


s-pointer

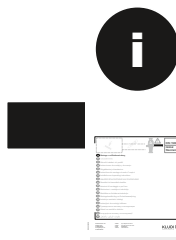

DIN EN 806
DIN EN 1717
DIN 1988
Global
Standards

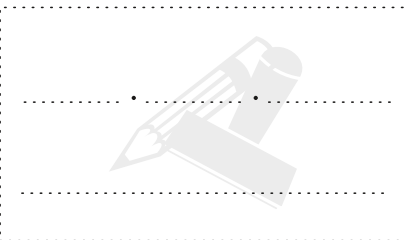

D Montage- und Bedienanleitung

CN 安装及操作指南

CZ Návod k instalaci a k použití

E Instrucciones de montaje y de manejo

F Instructions de montage et mode d'emploi

GB Installation and operating instructions

GR ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ

H Szerelési és használati utasítás

I Istruzioni di montaggio e per l'uso


NL Montagehandleiding en Gebruiksaanwijzing




PL Instrukcja montażu i obsługi

RO Instrucțiuni de montaj și utilizare



RUS Руководство по монтажу и эксплуатации

SK Návod na montáž a obsluhu


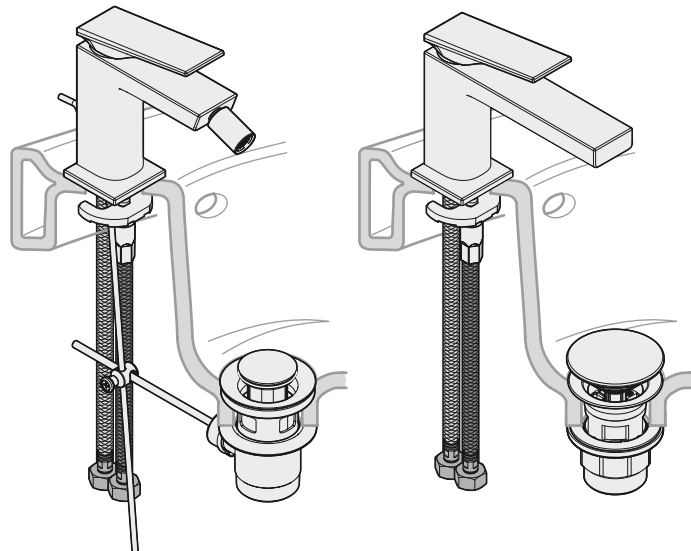


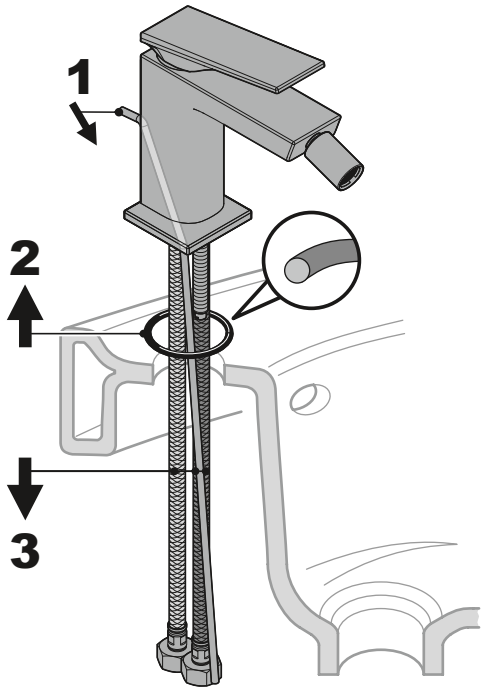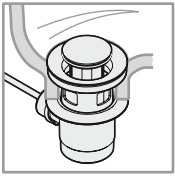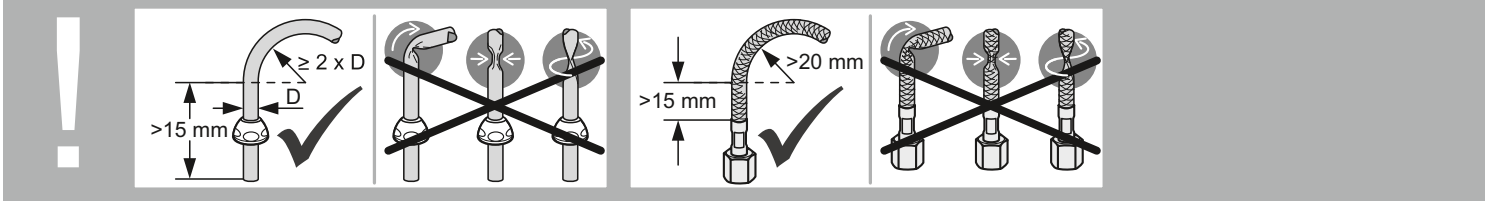

1.

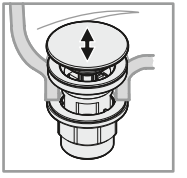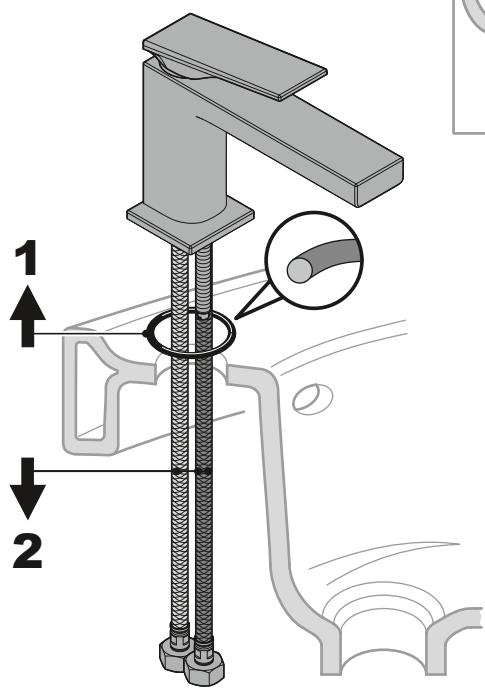

2.

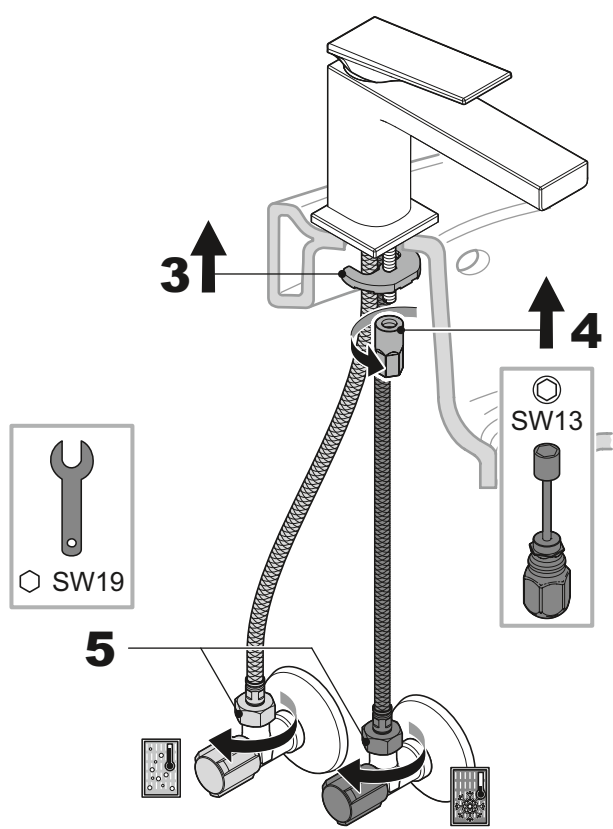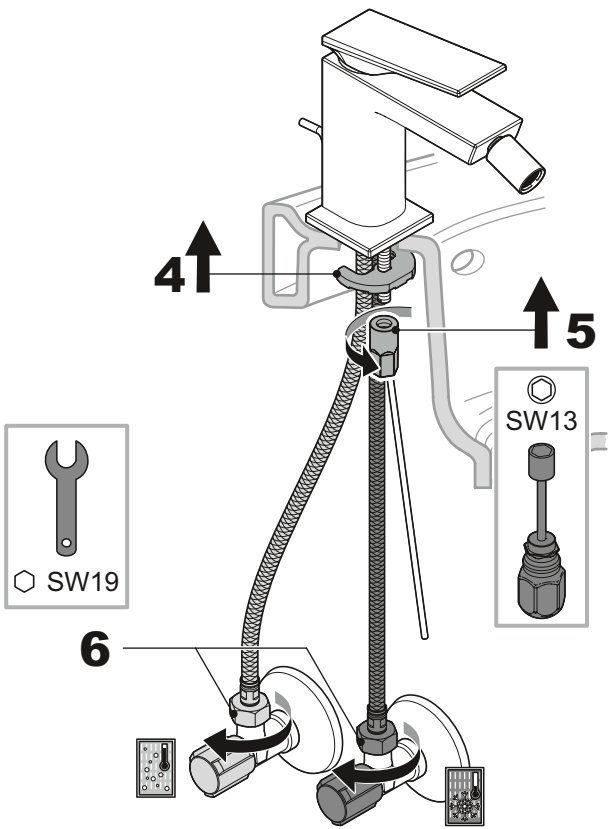

3.

