
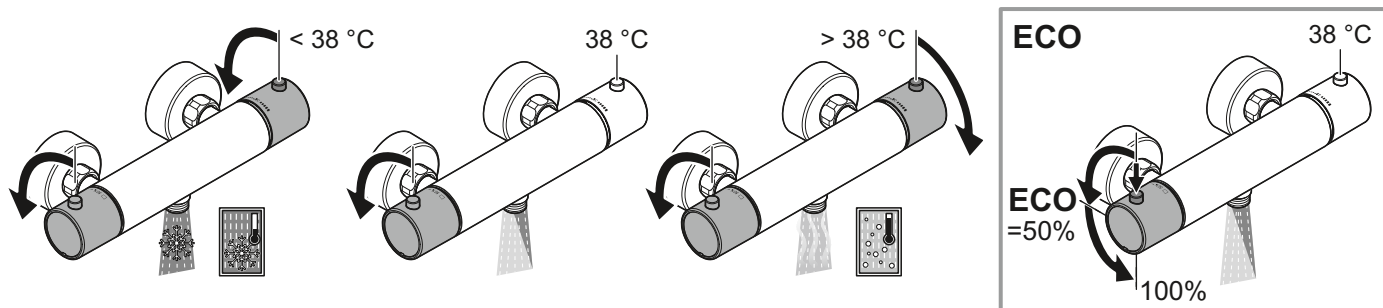


- (D)** Montage- und Bedienanleitung
- (CN)** 安装及操作指南
- (CZ)** Návod k instalaci a k použití
- (E)** Instrucciones de montaje y de manejo
- (F)** Instructions de montage et mode d'emploi
- (GB)** Installation and operating instructions
- (GR)** ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ
- (H)** Szerelési és használati utasítás
- (I)** Istruzioni di montaggio e per l'uso
- (NL)** Montagehandleiding en Gebruiksaanwijzing
- (PL)** Instrukcja montażu i obsługi
- (RO)** Instrucțiuni de montaj și utilizare
- (RUS)** Руководство по монтажу и эксплуатации
- (SK)** Návod na montáž a obsluhu

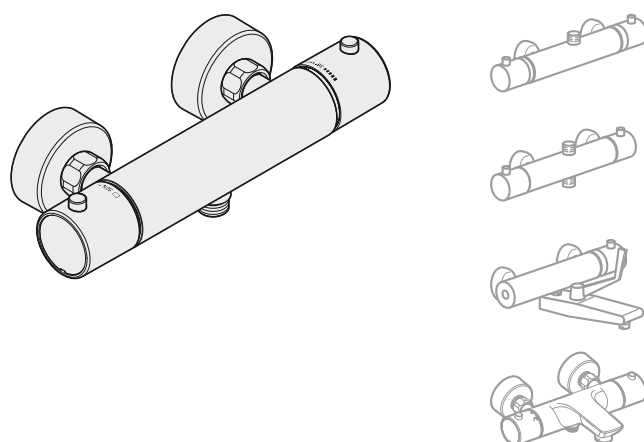

1.

1

2

max. $\varnothing$ 45mm

3

3

4



4.

Diagram 4 illustrates the step of tightening the pressure plate. The pressure plate (6) is shown being moved towards the cylinder head (7) by turning the adjustment screw (8) clockwise. A wrench icon is shown in a box, indicating the tool used for this step.

5.

50% 100%

10°

38°

11

38°C ± 1°C ✓

38°C ± 1°C ➔ **6.**

6.

12

SW5

14

13

100%

17b

962808/XX

KLUDI


KLUDI

16

100%

17a

17b

$38^{\circ}\text{C} \pm 1^{\circ}\text{C}$ ✓