

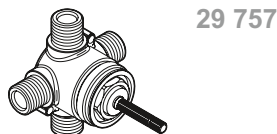
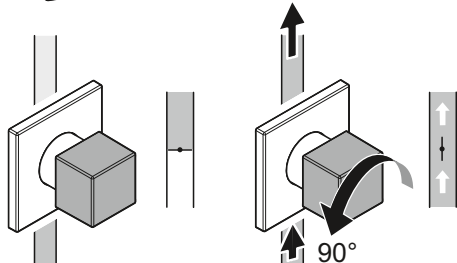




29 209
29 211
29 809
29 811
53 811

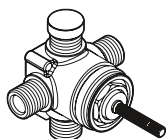






29 757

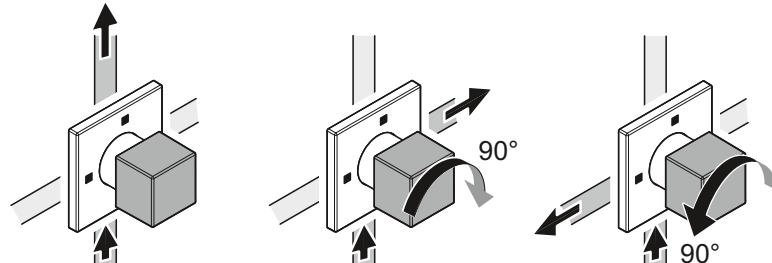



29 747

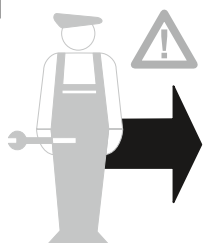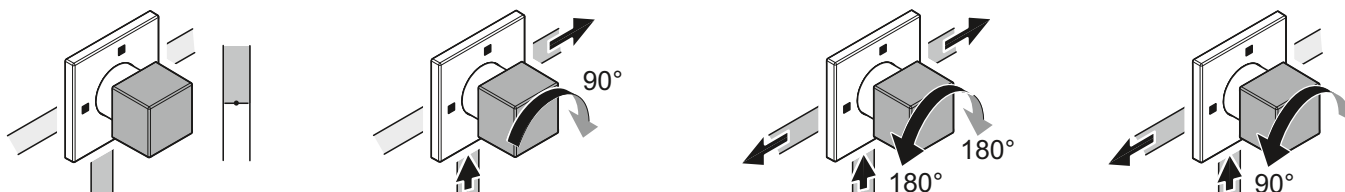



DIN EN 806
DIN EN 1717
DIN 1988
Global
Standards

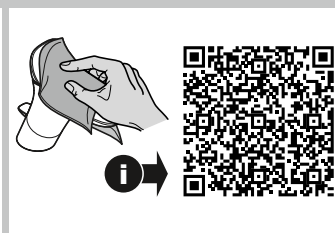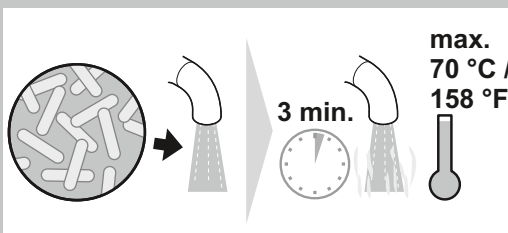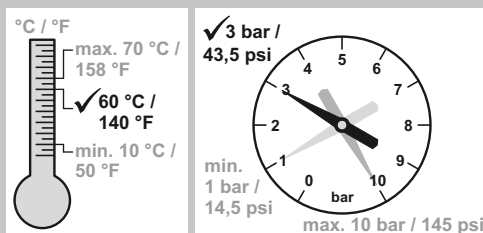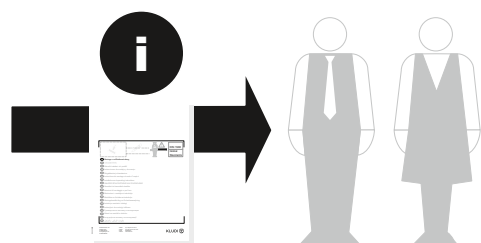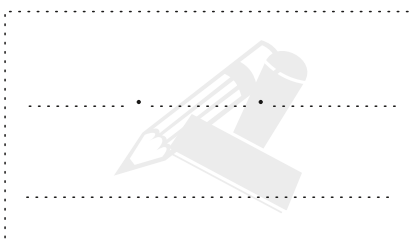

- ⓓ Montage- und Bedienanleitung
ⒸⓃ 安裝及操作指南
ⒸⓏ Návod k instalaci a k použití
Ⓔ Instrucciones de montaje y de manejo
Ⓔⓢ Paigaldamine ja kasutamine
Ⓕ Instructions de montage et d'utilisation
Ⓖⓑ Installation and operating instructions
Ⓖⓡ ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ
Ⓕ Szerelési és használati utasítás
Ⓘ Istruzioni di montaggio e per l'uso
Ⓕⓣ Montavimo ir naudojimo instrukcija
ⒻⓂ Montāžas un lietošanas instrukcija
ⒼⓁ Montagehandleiding en Gebruiksaanwijzing
ⒼⓁ Instrukcja montażu i obsługi
Ⓡⓞ Instrucţiuni de montaj şi utilizare
Ⓡⓞⓢ Руководство по монтажу и эксплуатации
ⓂⓀ Návod na montáž a obsluhu
ⓂⓁ Navodila za montažo in uporabo
ⓂⓂ Інструкція по монтажу та експлуатації
ⓂⓂ تعليمات التركيب والتشغيل

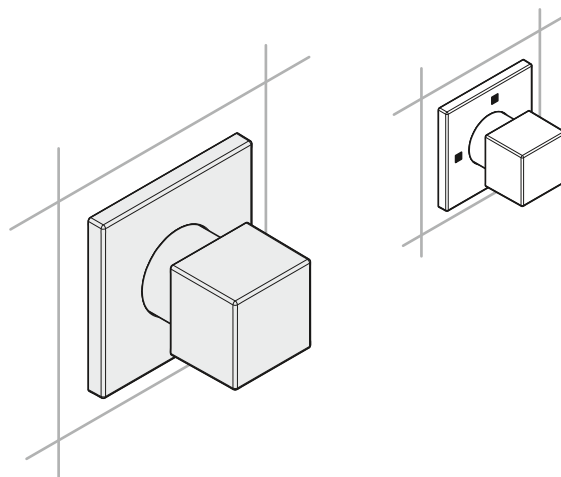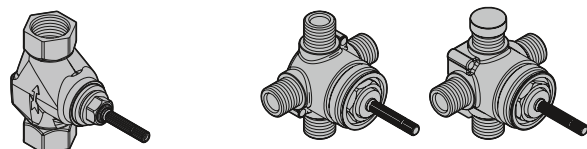

1.

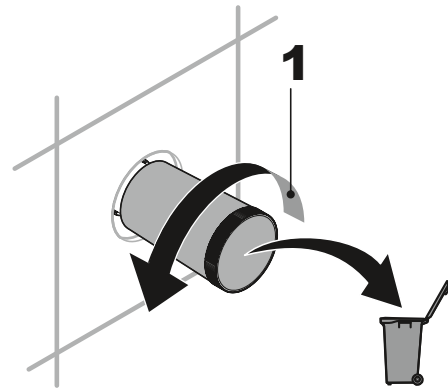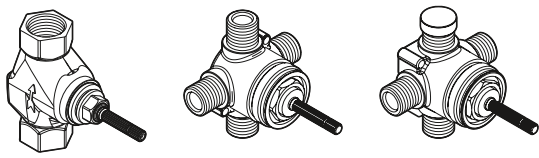

2.

