

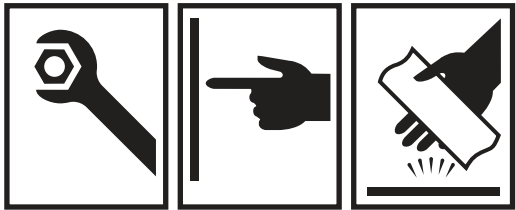


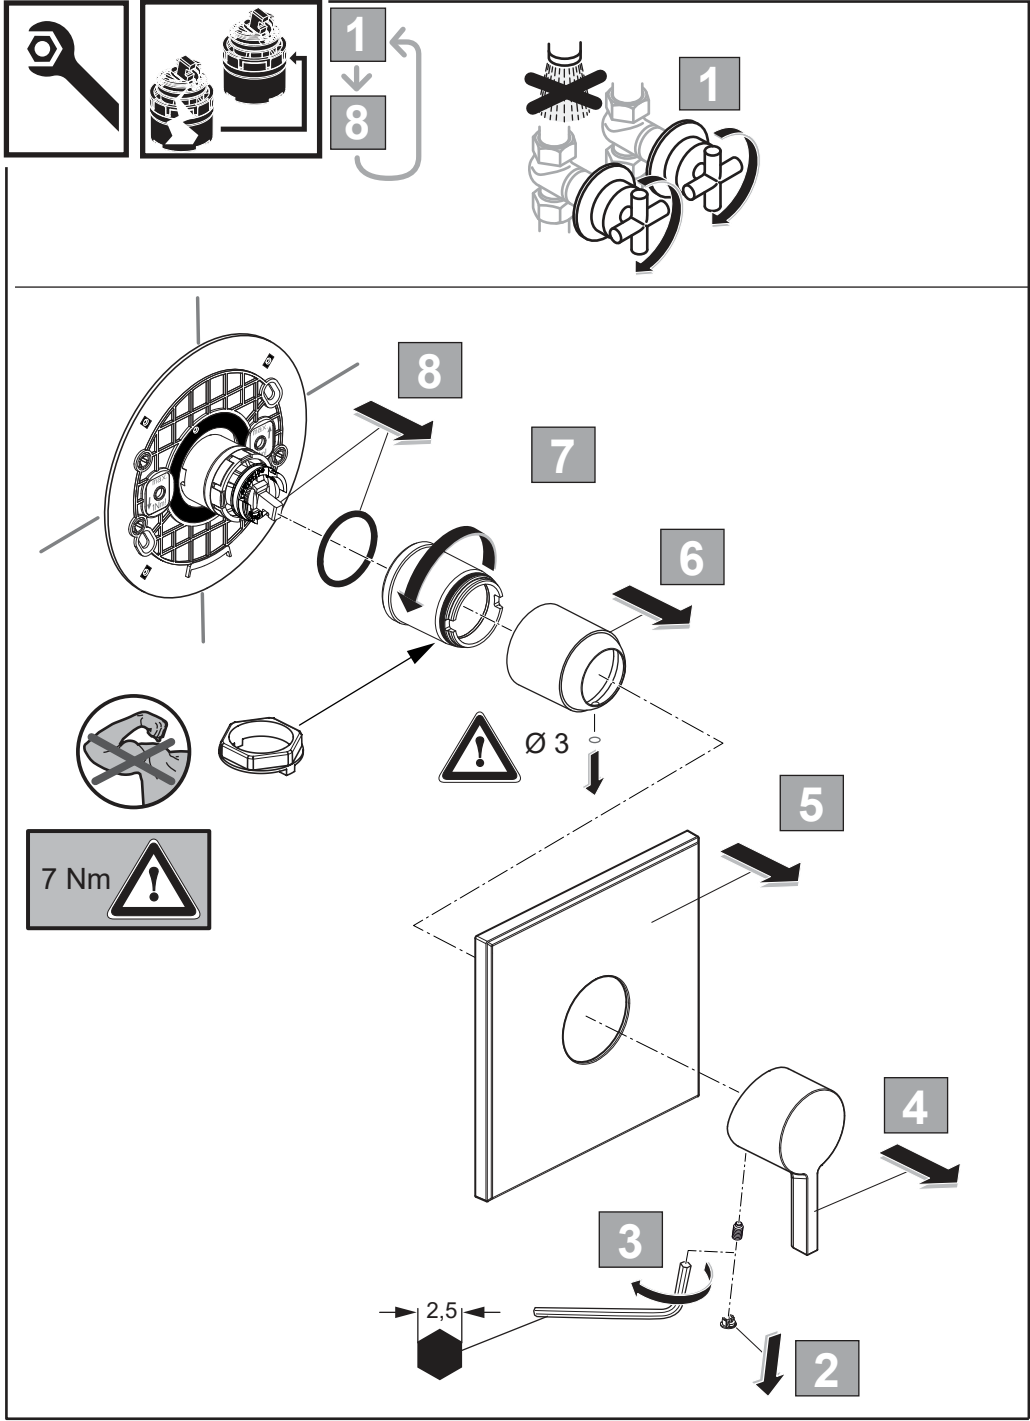

Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb /
Rendelhető alkatrészek / Запасні частини / Reservni delovi / Резервни делови /
Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļu

XX = AA, A5



Pos.	Part No.	
1	B 961 665 XX	
2	A 861 877 XX	
3	A 861 876 NU	
4	A 861 873 XX	
5	A 861 874 NU	
6	A 861 500 NU	
7	A 960 890 NU	
8	A 963 143 NU	
9	A 7879 XX	
10	A 960 704 NU	20mm
	A 962 476 NU	40mm

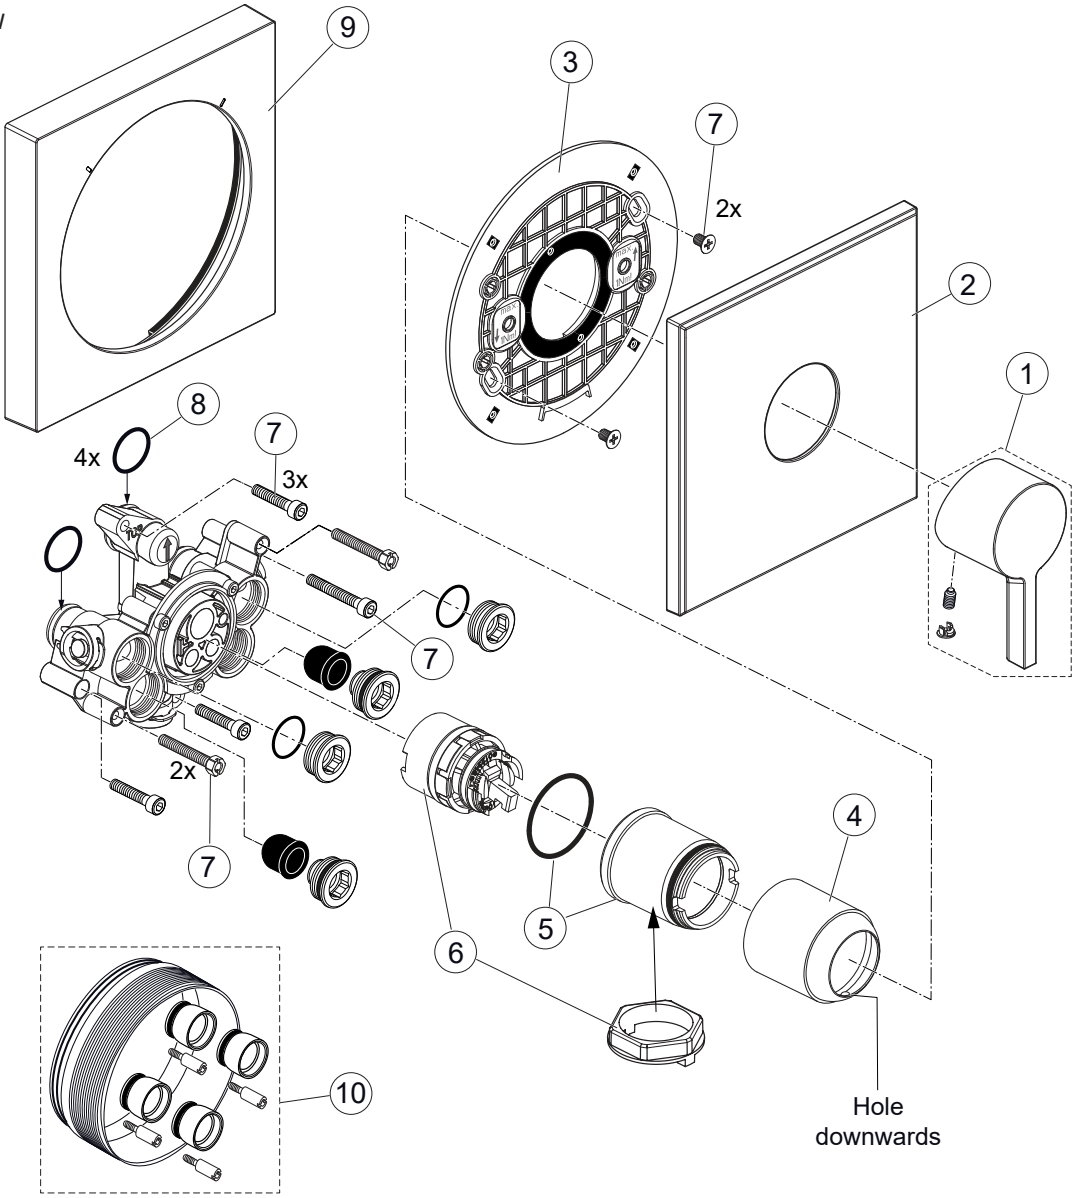


Joy Neo
A8743 ..







Ideal Standard

1025 / A 869 321
Made in Germany

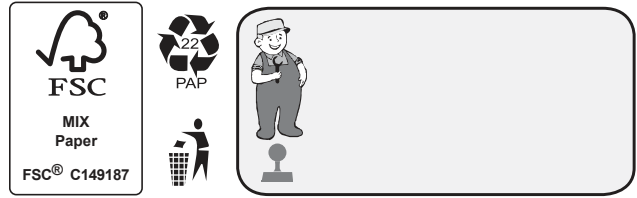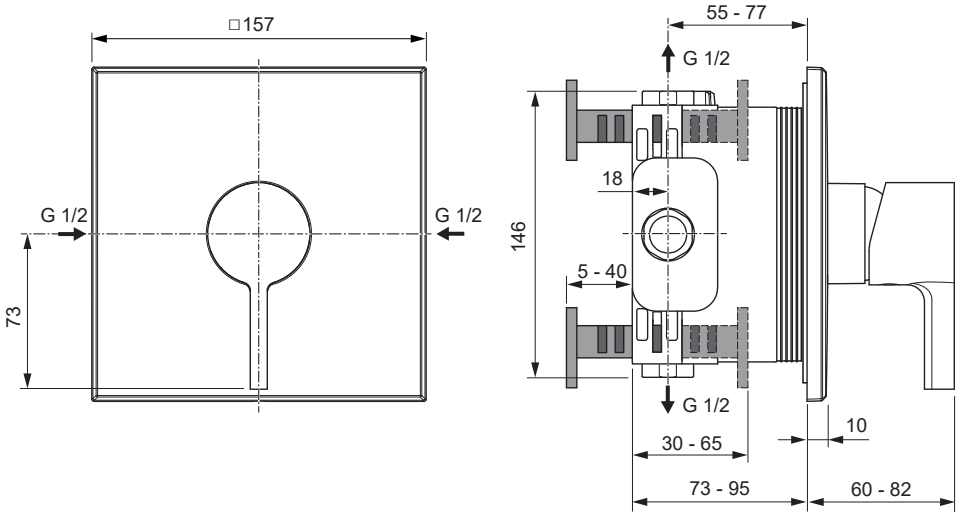

Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium
www.idealstandard.com

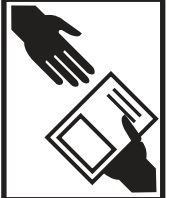

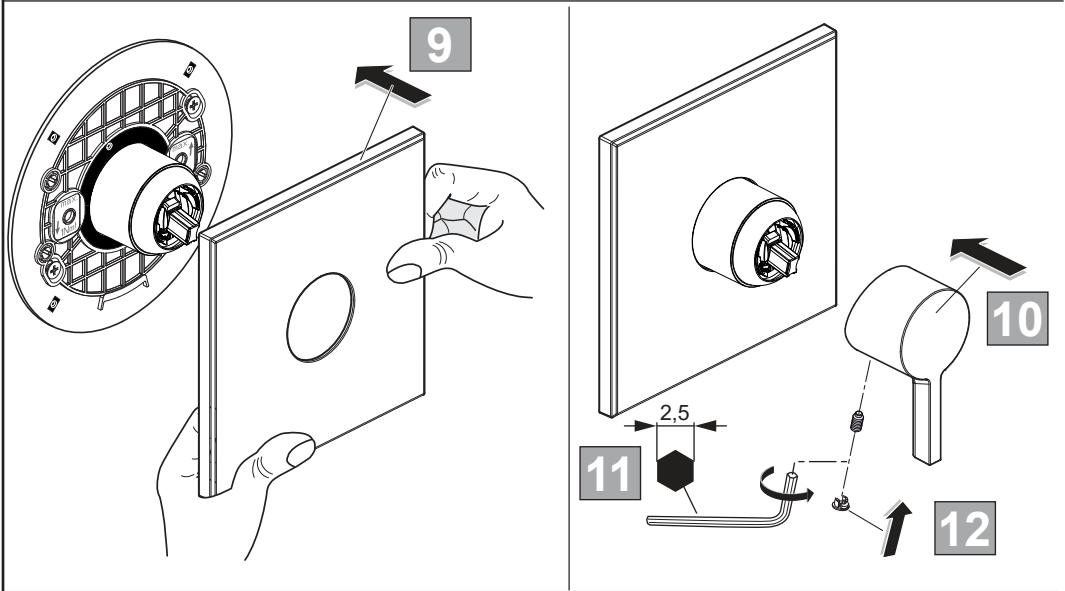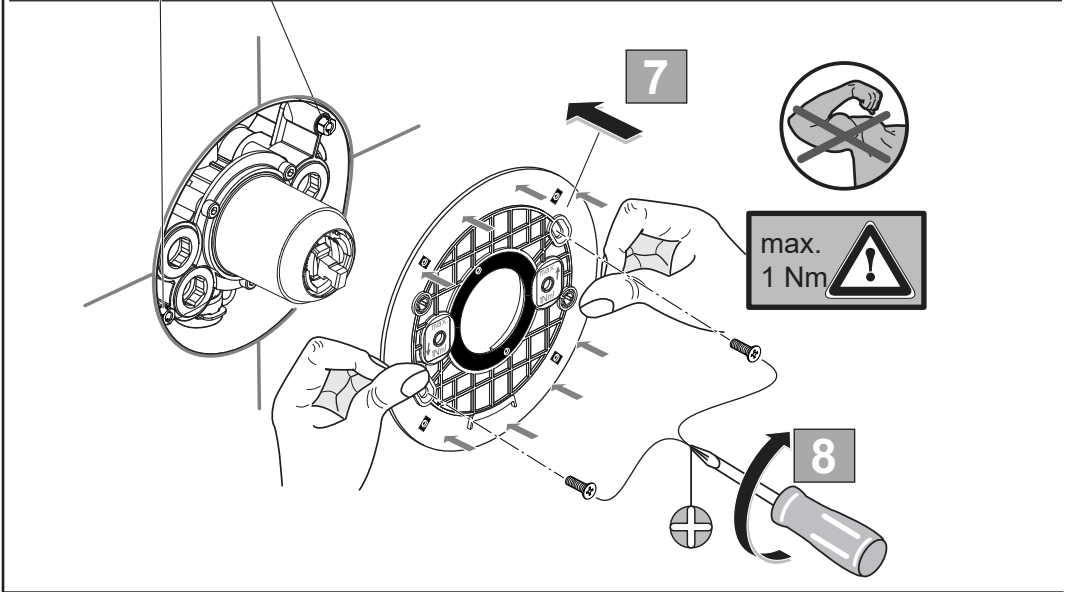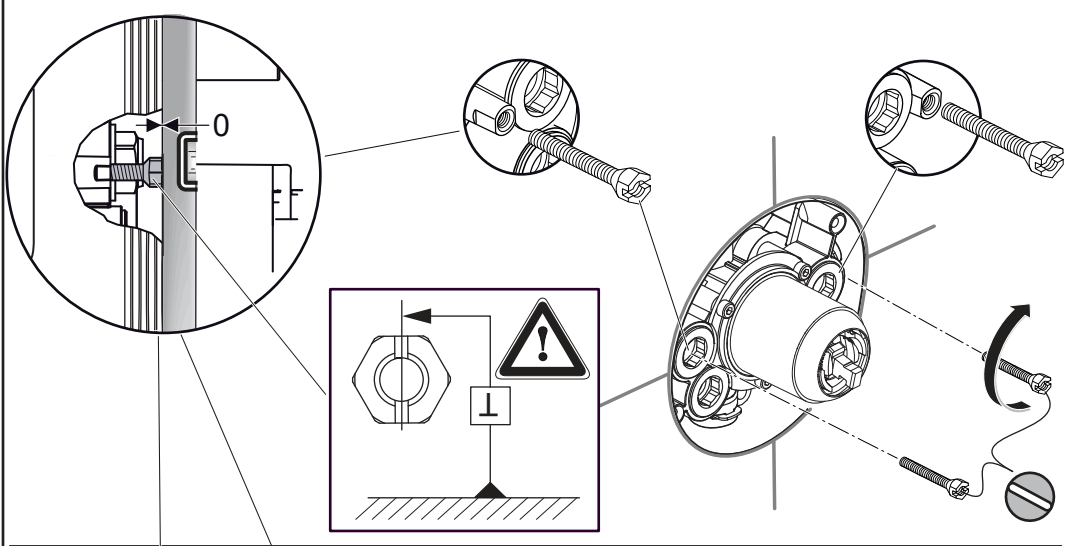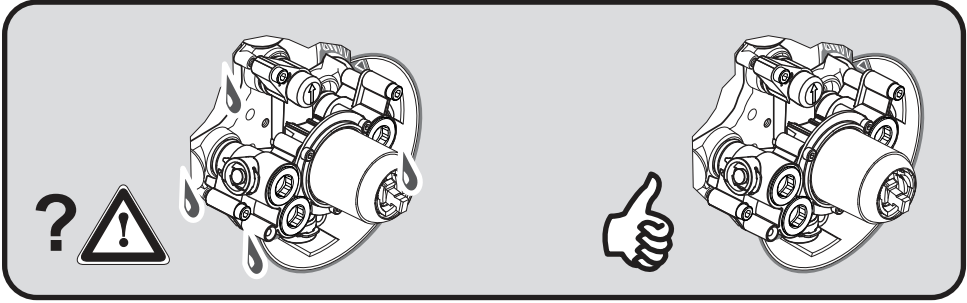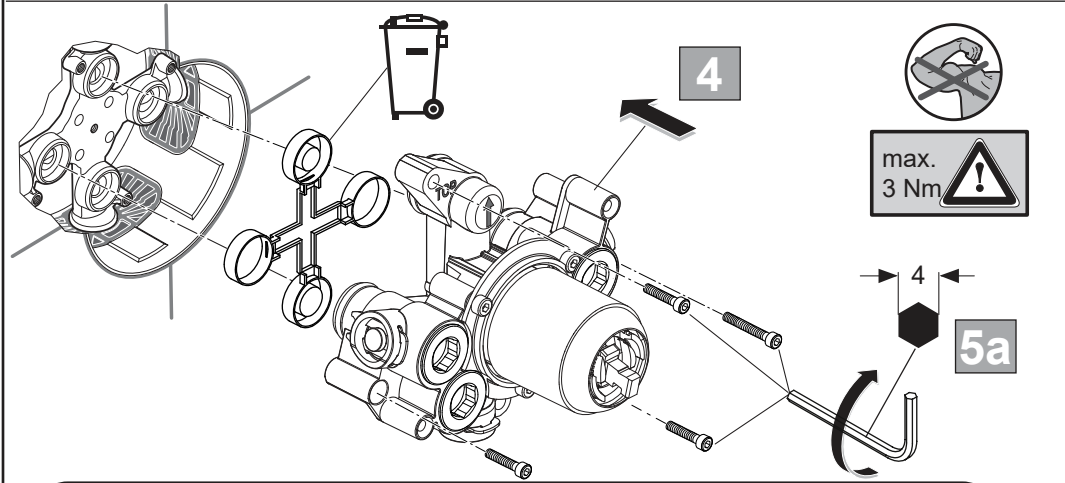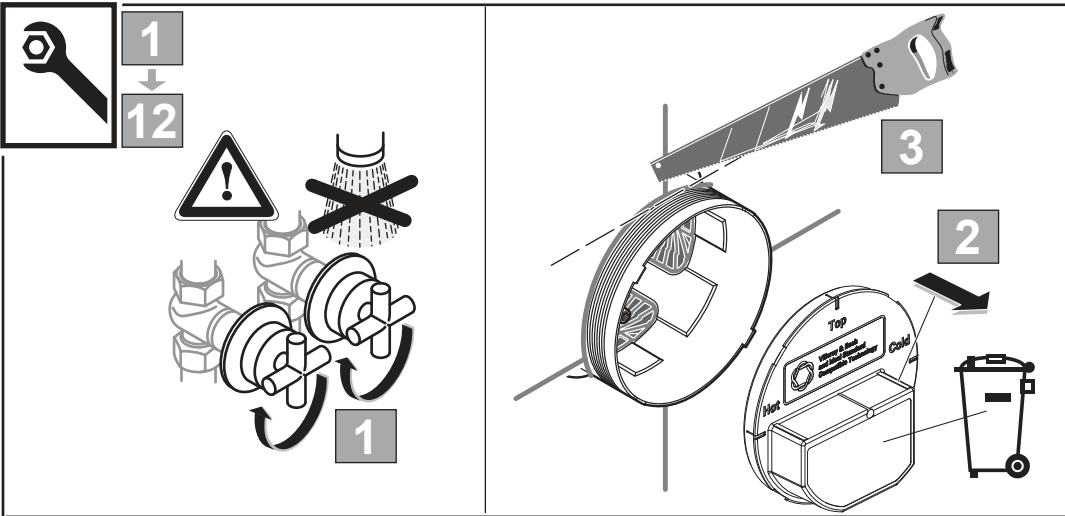

Temperature Control

1. Remove the temperature control cover.


2. Adjust the temperature control using the screwdriver.

3. Check the temperature control settings.

4. Verify the temperature control settings.

5. Confirm the temperature control settings.

P	°C	°C	°C					
			0	1	2	3	4	5
0,3 MPa 3 bar	50°C	15°C	50	49	44	40	35	33
	65°C	15°C	65	63	57	50	44	40
	85°C	15°C	85	83	74	64	56	50

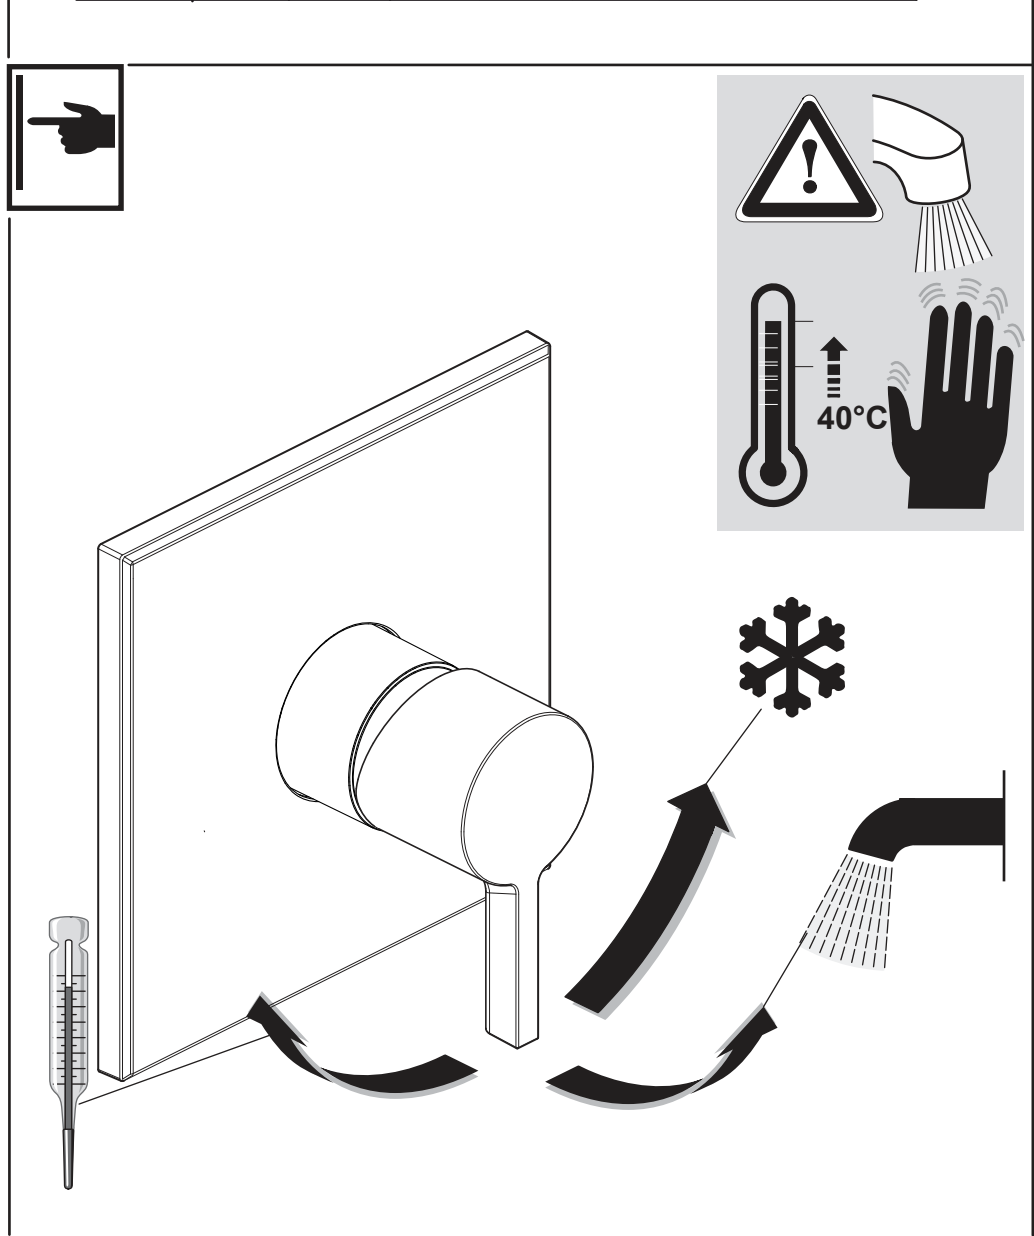

	P	bar		MAX. 10		5			Q (3 bar)
	T	°C		MAX. 80		65			l/min
						55			26